



# FLEX AV

FM-19D


## Resetting the FM-19D

If you are experiencing problems with your FM-19D a hard reset can be attempted. Resetting the FM-19D will restore factory settings to the microphone.

To reset the FM-19D, start by unplugging the CAT5 cable connecting the microphone to the network., followed by pressing and holding the front Flex AV Logo button on the FM-19D. Continue holding the Flex AV Logo button while plugging the CAT5 cable into the back of the FM-19D. Once the FM-19D turns blue and beeps, the microphone is reset and the Flex AV Logo button can be released.


## Unplug

Unplug the CAT5 cable connecting the microphone to the network.

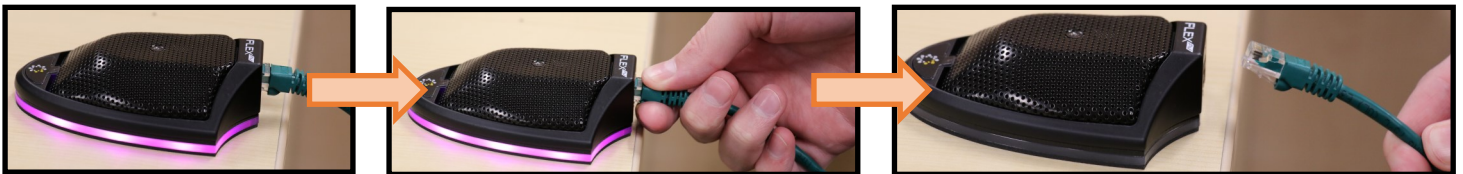

## Plug In

After plugging the CAT5 cable back into the FM-19D wait for the microphone base to turn blue.

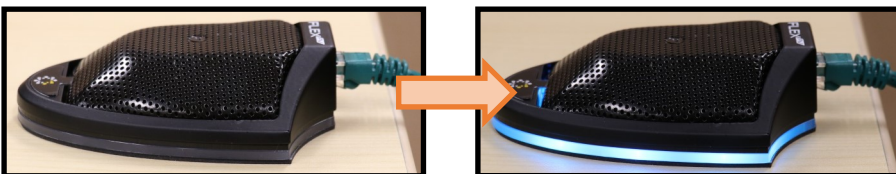

## Hold the Flex AV Icon

When the base of the microphone turns blue touch and hold the Flex AV button located on the front of the Microphone. Hold the button until the microphone base turns white and a three note melody is played. The microphone is now returned to its default settings.

